

Timekeeping

Use the Timekeeping Mode to set and view the current time and date.

To set the time and date

1. In the Timekeeping Mode, hold down **A** until the

