

You are now the proud owner of a SEIKO Analogue Quartz Watch Cal. 7T04. For best results, please read the instructions in this booklet carefully before 1(7T04. 8f51(7T044Ms4n44Ms4n4ActAnalogue)-ActQuartz)-ActWatch. this manual handy for ready reference.

CONTENTS

	Pag
SCREW LOCK TYPE CROWN	5
SETTING THE TIME AND	
ADJUSTING THE STOPWATCH HAND POSITION	6
SETTING THE DATE	9
STOPWATCH	10
SECURITY LOCK BUTTON OPERATION	13
TACHYMETER	
TELEMETER	16
BATTERY CHANGE	
SPECIFICATIONS	20

⁼ For the care of your watch, see "TO PRESERVE THE QUALITY OF YOUR WATCH" in the attached Worldwide Guarantee and Instruction Booklet.

TELEMETER (for models with telemeter scale on the dial)

- The telemeter can provide a rough indication of the distance to the source of light and sound.
- The telemeter indicates the distance from your location to an object that emits both light and sound. For example, it can indicate the distance to the place where lightning struck by me18(a)-300r-26(1)-17(n)-26(g)-2()-93(s)-23(n)-23(e)-25 soes1I-21(ja-23(ep-32(os-32(oe-31(hd-26)-93(sa-29(e)-269s)-232i)-25(r)-29)-93(sy-14()-21(nu-2()-93(s)-42(

16 17

BATTERY CHANGE

The

18

