 
 
 
Cal. 7T62

INSTRUCTIONS	(P.	3)
BEDIENUNGSANLEITUNG	(S.	20)
INSTRUCTIONS	(P.	37)
ISTRUZIONI	(P.	54)
INSTRUCCIONES	(P.	71)
INSTRUÇÕES	(P.	88)
用法説明	(105	頁)











SETTING THE DATE

• Before setting the date, be sure to set the main time.

STOPWATCH

- The stopwatch can measure up to 60 minutes in 1/5-second increments.
- After 60 minutes, it will start counting again from "0" repeatedly up to 12 hours.

HOW TO STOP THE ALARM

• HOW TO CANCEL THE ALARM TIME YOU HAVE SET





To measure the hourly rate of operation

- Use the stopwatch to measure the time required to complete 1 job.
- 2 Tachymeter scale indicated by STOPWATCH second hand gives the average number of jobs accomplished per hour.

BATTERY CHANGE

The miniature battery which powers your watch should last approximately **3 years**. However, because the battery is inserted at the factory to check

