RONDA startech – Movement cal. 3520.D

User's Manual English

Description of the display and control buttons

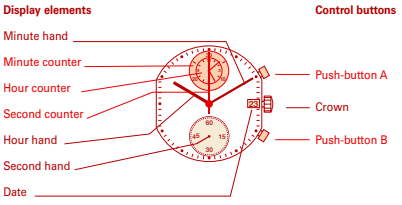

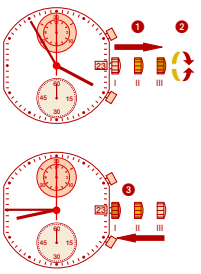

Chronograph: Basic function

(Start / Stop / Reset)

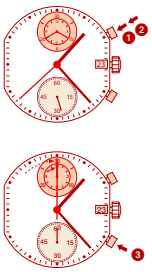

Example:

1. **Start:** Press push-button **A**.
2. **Stop:** to stop the timing, press pushbutton A once more and read the chronograph counters: **4h / 20 min / 38 sec**
3. **Zero positioning:** Press push-button **B**. (The chronograph hands will be reset to their zero positions.)

Chronograph: Accumulated timing

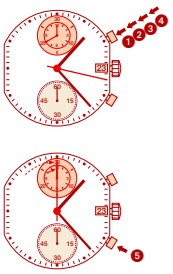

Example:

1. **Start:** (start timing)
2. **Stop:** (e.g. **15** min **5** sec following 1)
3. **Restart:** (timing is resumed)
4. * **Stop:** (e.g. **5** min **12** sec following 3) = **20 min 17 sec**
   (The accumulated measured time is shown)
5. **Reset:** The chronograph hands are returned to their zero positions.

Please note:
* Following 4, the accumulation of the timing can be continued by pressing **push-button A** *(Restart / Stop, Restart / Stop, ...).*

Chronograph: Intermediate or interval timing

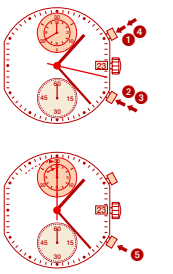

Example:

1. **Start:** (start timing)
2. **Display interval:** e.g. **20 minutes 17 seconds** (timing continues in the background)
3. **Making up the measured time:** (the chronograph hands are quickly advanced to the ongoing measured time.)
4. **Stop:** (Final time is displayed)
5. **Reset:** The chronograph hands are returned to their zero position

Please note:
* Following 3, further intervals or intermediates can be displayed by pressing **push-button B** *(display interval / make up measured time, ...).*

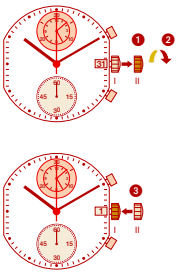

Adjusting the chronograph hands to zero position

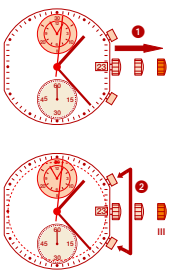

Example:
One or several chronograph hands are not in their correct zero positions and have to be adjusted (e.g. following a battery change).

1. Pull out the crown to position **III** (all chronograph hands are in their correct or incorrect zero position.)
2. Keep push-buttons **A and B** depressed **simultaneously** for at least 2 seconds (the second counter hand rotates by 360° → corrective mode is activated.)

Adjusting the second counter hand
Single step A **1 x short**
Continuous A **long**

Adjusting the next hand B

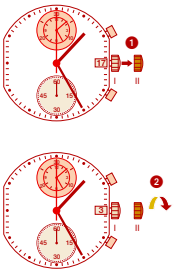

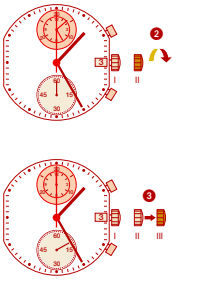

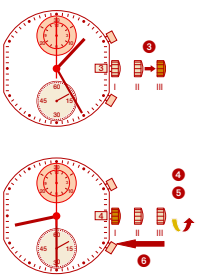

Battery type: 384 (diameter 7.9 mm x 3.6 mm / SR 41 SW)
Accuracy: +20 / -10 seconds per month

06/2014